

Tips for Using the Mouse/Clicker/Pointer

As a Mouse

- 1) Make sure the Mode Switch on the flat underside of the mouse (see picture below) is set to the position indicated by the Musical Note icon
- 2) Use the mouse as normal on a non-reflective surface

As a Clicker for Advancing Powerpoint slides and other slide programs

- 1) Make sure the Mode Switch on the flat underside of the mouse (see picture below) is set to the position indicated by the Presentation Screen icon. This disables the mouse functionality
- 2) You may now use the round Navigation Pad on the underside of the mouse to advance and repeat slides. You can also blank the screen by pressing the bottom button and use the **laser pointer** by pressing the top icon of the nav pad.

See Below for a full listing of functions:

